PORTABILITY KIT INSTALLATION

TOOLS REQUIRED: 1/2" and 9/16" sockets and ratchets, block(s) of wood (minimum of 6" tall).
Refer to the parts list on page 9.

WHEEL INSTALLATION

1. Block up end of generator opposite the fuel tank cap to install wheel kit.
2. Insert wheel spacer **(item 20)** into the center of the wheel **(item 35).**
3. Slide 3/8 x 3.75" bolt **(item 10)** through the wheel bracket on the carrier, then through the wheel **(item 35)** and 3/8 washer **(item 29)**, with the offset side of the wheel hub against the wheel bracket.
4. Thread 3/8 nyloc nut **(item 11)** onto the bolt and tighten to securely clamp the wheel assembly to the tubing.
5. Repeat above instructions for the remaining wheel.

FOOT INSTALLATION

1. Blocking up the engine side of the generator, place a spacer **(item 43)** and a foot **(item 37)** under the carrier channel. Thread a 5/16-18 x 2.75" bolt **(item 8)** and 5/16 washer **(item 40)** through the mounting holes and thread a 5/16 nyloc nut **(item 15)** to the bolt to secure the foot to the carrier. **Caution: Do not over tighten so that the foot material collapses.**
2. Repeat step 1 for the remaining foot.

HANDLE INSTALLATION

1. Place the handle **(item 31)** onto the reduced portion of the upright tubes of the base until the handle release buttons **(item 32)** lock in place.

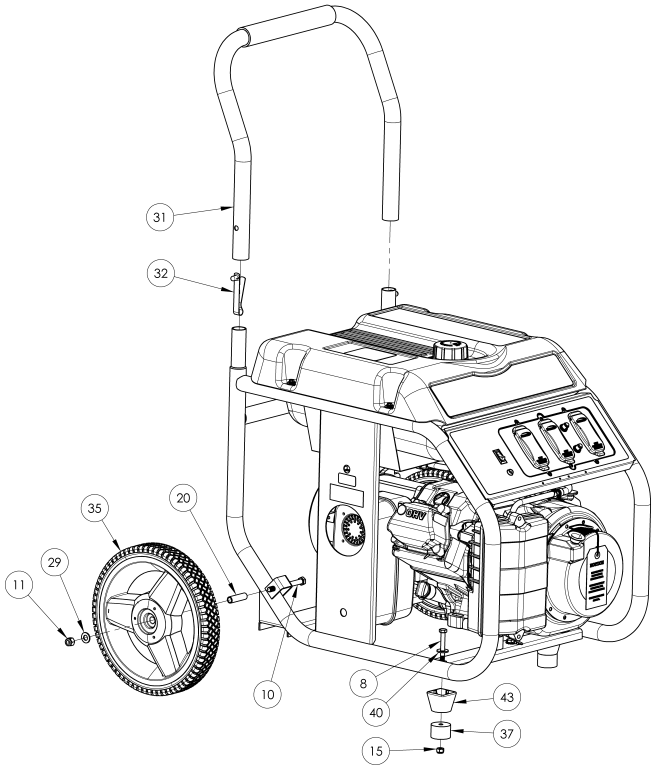

LIMITED WARRANTY

Warranty Coverage: Pramac America, LLC (the Company) warrants to the original retail customer in North America that it will repair or replace, free of charge, any parts found by the Company or its authorized service representative to be defective in material or workmanship. This warranty covers the cost of replacement parts and labor for defects in material or workmanship.

Not Covered:

- Transportation charges for sending the product to the Company or its authorized service representative for warranty service, or for shipping repaired or replacement products back to the customer; these charges must be borne by the customer.
- If a separate operator's manual and engine warranty from the engine manufacturer is included with this product, only that warranty will apply to the engine.
- Damages caused by abuse or accident, and the effects of corrosion, erosion and normal wear and tear.
- Warranty is voided if the customer fails to install, maintain and operate the product in accordance with the instructions and recommendations of the Company set forth in the owner's manual, or if the product is used as rental equipment.
- The Company will not pay for repairs or adjustments to the product, or for any costs or labor, performed without the Company's prior authorization.

Warranty Period: Two (2) years from the date of purchase on products used solely for consumer applications; if a product is used for business or commercial applications, the warranty period will be limited to one (1) year from the date of purchase. For warranty service, the customer must provide dated proof of purchase and must notify the Company within the warranty period.

For warranty service: Call toll free 800-445-1805, or write to *Pramac America, LLC, Product Services, 4970 Airport Road, P. O. Box 6001, Kearney, NE 68848.*

EXCLUSIONS AND LIMITATIONS: THE COMPANY MAKES NO OTHER WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED. THE WARRANTY SERVICE DESCRIBED ABOVE IS THE EXCLUSIVE REMEDY UNDER THIS WARRANTY; LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES IS EXCLUDED TO THE EXTENT PERMITTED BY LAW.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow a disclaimer of implied warranties, or the exclusion or limitation of incidental and consequential damages, so the above disclaimers and exclusions may not apply to you.

PARTS DRAWING / SCHEMA DES PIÈCES / DIAGRAMA DE PIEZAS

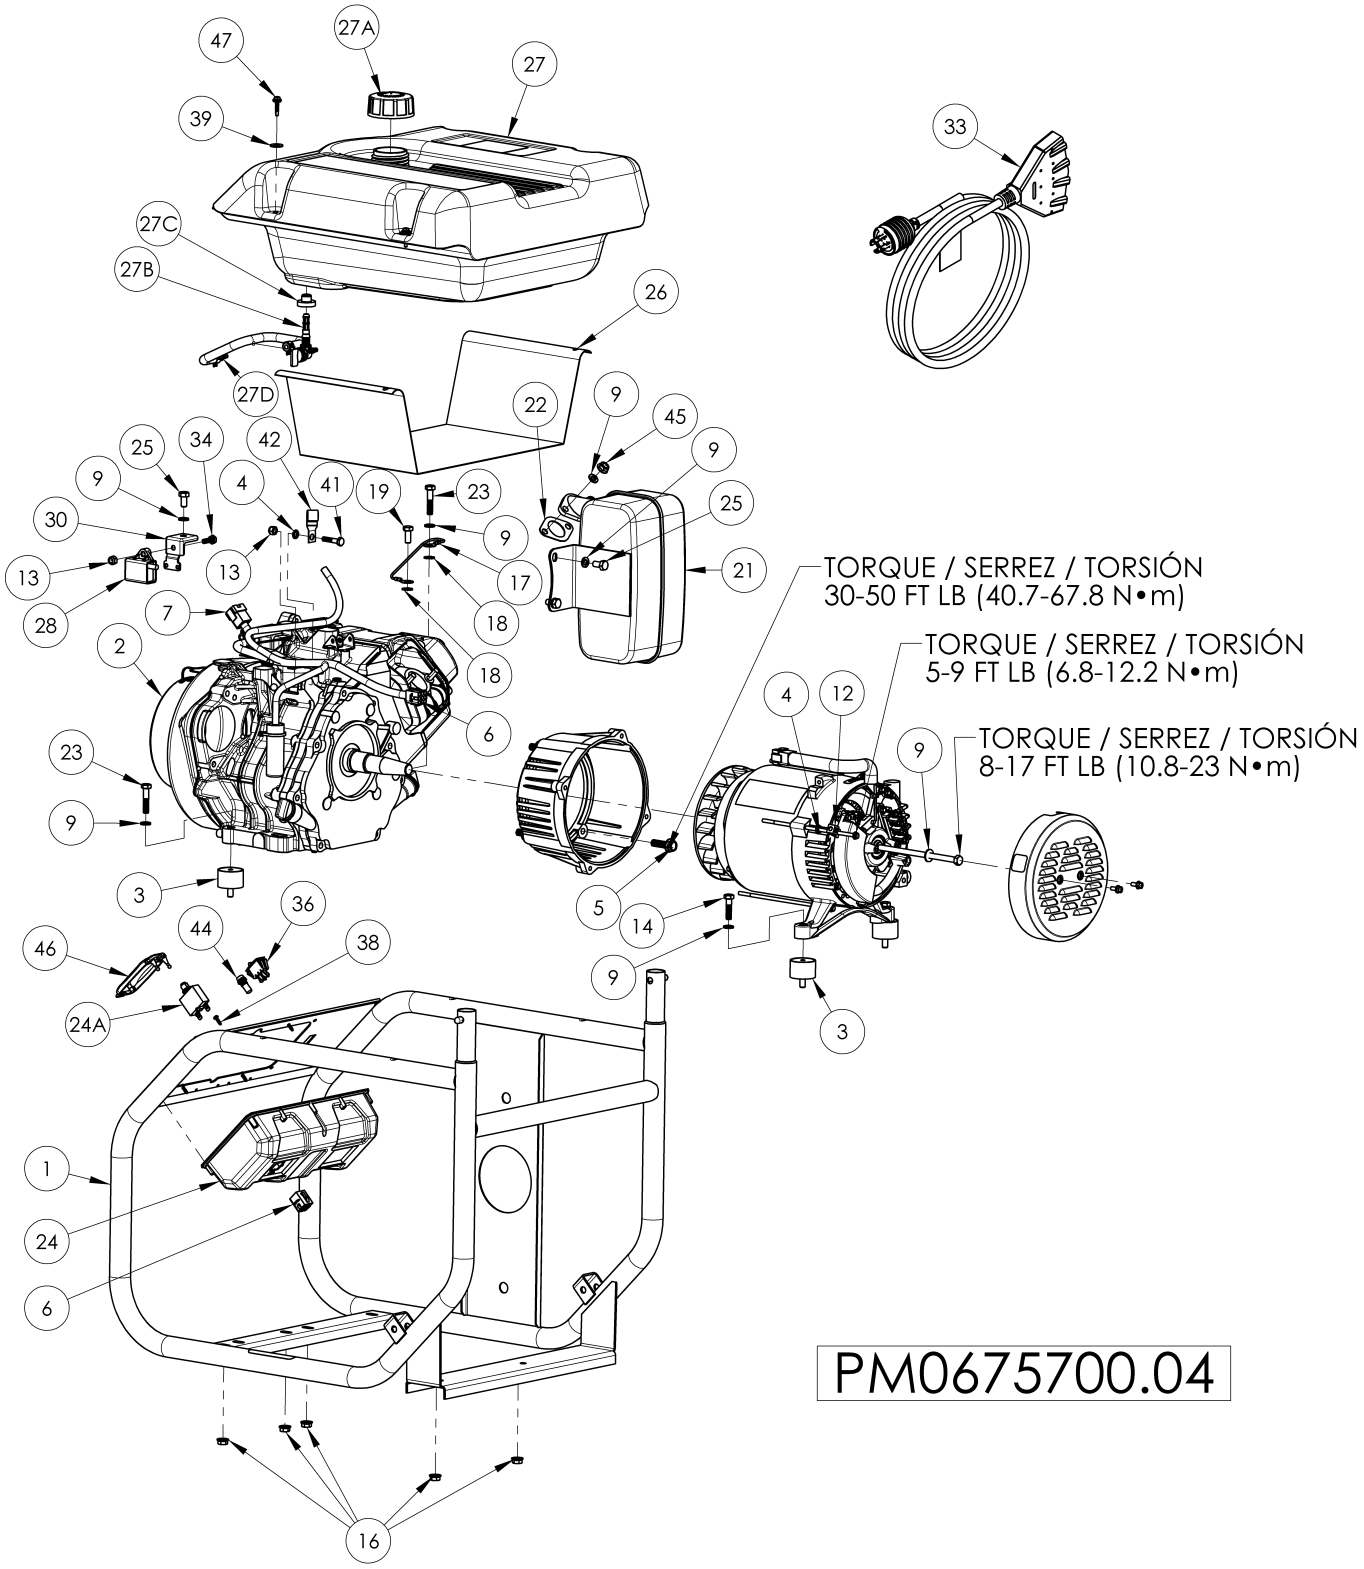
TORQUE / SERREZ / TORSIÓN
30-50 FT LB (40.7-67.8 N•m)
TORQUE / SERREZ / TORSIÓN
5-9 FT LB (6.8-12.2 N•m)
TORQUE / SERREZ / TORSIÓN
8-17 FT LB (10.8-23 N•m)
PM0675700.04

PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
1	0068039	Carrier, assembly	Ensemble transport	Transportador, conjunto	1
2	0063724	Engine 10 hp Yamaha OHV	Moteur	Motor	1
3	0051094	Isolator	Sectionneur	Aislador	4
4	Note A	Washer, star external 1/4	Rondelle à dents externa 1/4	Arandela, estrella 1/4	2
5	0057512	Bolt whz 3/8-16 x 1.25	Boulon	Perno	4
6	0062196	Connector, panel	Connecteur, tableau	Conector, panel	2
7	0056716	Connector, stator	Connecteur, stator	Conector, estator	1
8	Note A	Bolt, hex 5/16-18 x 2.75	Boulon	Perno	2
9	Note A	Washer, lock 5/16	Contre-écrou 5/16	Arandela, de cierre 5/16	10
10	Note A	Bolt, 3/8-16 x 3.75	Boulon	Perno	2
11	0057578	Nut, nyloc 3/8-16	Écrous nyloc 3/8-16	Tuerca, nyloc 3/8-16	2
12	0008854	Lug, ground	Oeillet de mise à la terre	Terminal, tierra	1
13	0040832	Nut, nyloc 1/4-20	Écrous nyloc 1/4-20	Tuerca, nyloc 1/4-20	2
14	Note A	Bolt, 5/16-18 x 1.25	Boulon	Perno	2
15	0048736	Nut, nyloc 5/16-18	Écrous nyloc 5/16-18	Tuerca, nyloc 5/16-18	2
16	0057254	Nut, hex flg 5/16-18	Écrous 5/16-18	Tuerca, 5/16-18	5
17	0049224	Assembly, ground wire	Ensemble fil de mise à la terre	Conjunto, câble de tierra	1
18	Note A	Washer, star external 5/16	Rondelle à dents externa 5/16	Arandela, estrella 5/16	2
19	Note A	Bolt, hex 5/16-18 x .75	Boulon, tête hex 5/16-18 x 3/4	Perno 5/16-18 x 3/4	1
20	0068054	Spacer .38 ID	Entretoise	Espaciador	2
21	0065185	Muffler	Silencieux	Silenciador	1
22	0063701	Gasket	Joint	Empaquetadura	1
23	Note A	Bolt, 5/16-18 x 1.50	Boulon	Perno	2
24	0068041	Panel, wired	Tableau compl. câblé	Panel, cabeado completo	1
24A	0049072	Circuit Protector 25 amp	Protecteur de circuit 25 amp	Protector de circuito 25 amp	2
25	0049268	Bolt M8 x 16mm	Boulon M8 x 16mm	Perno M8 x 16mm	3
26	0065278	Shield, heat	Écran de chaleur	Pantalla para el calor	1
27	Note B	Fuel tank assembly	Assemb. complet du réservoir	Conjunto tanque	1
27A	0064057	Fuel Cap	Capuchon	Tapa de combustible	1
27B	0061756	Fuel shut off with filter	Robinet de carburant	Válvula combustible con filtro	1
27C	0062673	Fuel Bushing	Bague d'essence	Buje de combustible	1
27D	0064306	Fuel connector	Connecteur à carburant	Conector combustible	1
28	0064107	Module, low oil	Module, bas niveau d'huile	Módulo, nivel bajo de aceite	1
29	Note A	Washer, flat 3/8	Rondelle plates 5/16	Arandela, plana 5/16	2
30	0063830	Bracket, low oil	Support, bas niveau d'huile	Soporte, nivel bajo de aceite	1
31	0068053	Handle	Poignée	Manija	1
32	0063132	Snap-button	Fermoir-bouton	Cierre-botón	2
33	0066686	Cordset, 25 foot 30 amp	Ensemble de cordons, 25 pieds 30A	Juego de cordón, 25 pies 30 amperios	1
34	Note A	Bolt, 1/4-20 x .75	Boulon	Perno	1
35	0068050	Wheel	Roue	Rueda	2
36	0050298	Switch, Rocker	Interrupteur	Interruptor	1
37	0055894	Foot rubber	Pied	Pie	2
38	0062020	Screw #6-19 x .50 Torx	Vis	Tornillo	4
39	0058933	Washer, flat 1/4 W	Rondelle plates 1/4 large	Arandela, plana 1/4 lejos	4
40	0049352	Washer, flat 5/16 W	Rondelle plates 5/16 large	Arandela, plana 5/16 lejos	2
41	Note A	Bolt, 1/4-20 x 1.25	Boulon	Perno	1
42	0052931	J clamp	Collier	Pinza vinílica	1
43	0062932	Spacer, foot	Entretoise	Espaciador	2
44	0064072	Oil warning light	Huiler l'Avertissement Allume	La luz de la advertencia para el aceite	1
45	0062567	Nut M8	Écrous M8	Tuerca M8	2
46	0068044	Dust cover	Poussière couverture	Polvo cubre	3
47	0058618	Screw #10 x 1	Vis	Tornillo	4

PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS

Ref No.	Part No.	Description	Description	Descripción	Qty
60	0065506	Generator head, Vision	Tête de la génératrice, Vision	Cabezal del generador, Vision	1
60A	0065696	Adapter, engine	Adaptateur pour moteur	Adaptor, motor	1
60B	0065698	Rotor	Rotor	Rotor	1
60C	0065695	Stator	Stator	Estator	1
60D	0065705	Band, stator cover	Bande	Banda	1
60E	0065704	Bolt, M6 x 179	Boulon	Perno	4
60F	0063287	Support, bearing	Support, roulement	Soporte, Cojinete	1
60G	0063288	Brush module	Brosser le module	Cepille módulo	1
60H	0065694	Screw flg M5 x 16mm	Vis	Tornillo	3
60I	0063290	AVR module	La tension automatique régulatrice	El regulador automático del voltaje	1
60J	0063313	Bolt, M5 x 214	Boulon	Perno	2
60K	0063293	Nut M5	Écrous	Tuerca	2
60L	0063294	Terminal block	Bloc délimitant	Bloque terminal	1
60M	0063295	Washer M5	Rondelle	Arandela	2
60N	0065700	Washer, lock 10mm ID	Contre-écrou	Arandela, de cierre	1
60O	0065701	Washer 10.5mm ID	Rondelle	Arandela	1
60P	0063298	Cover, end	Couvercle	Tapa	1
60Q	0063299	Screw flg M5 x 12mm	Vis	Tornillo	6
60R	0063406	Fan	Ventilateur	Ventilador	1
60S	0065699	Bolt 5/16-24 x 9	Boulon	Perno	1
60T	0063413	Bearing	Roulement	Cojinete	1
60U	0065697	Harness, panel-head	Harnais, tableau-tête	Arreos, panel-cabezal	1

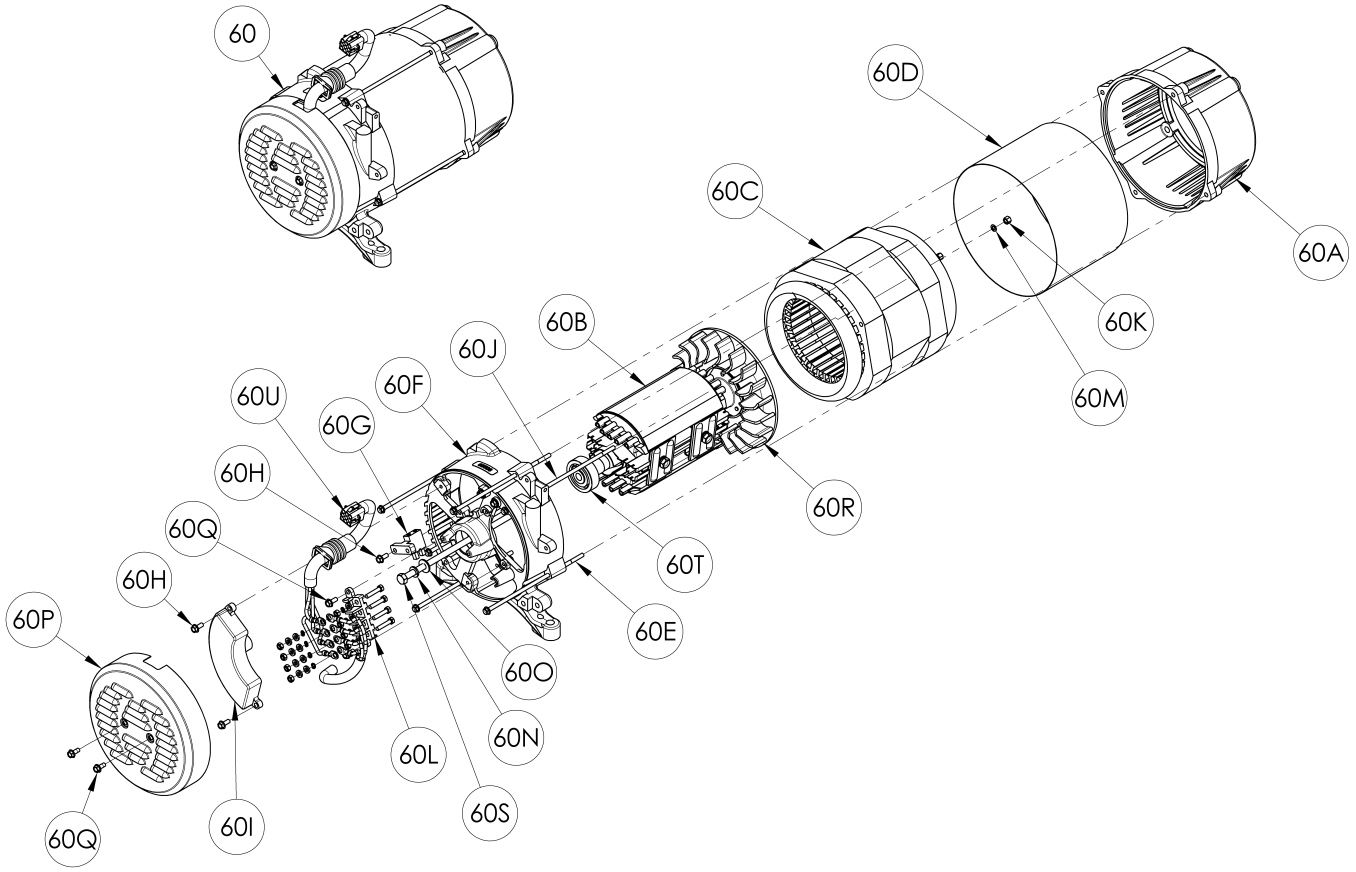

Note A: These are standard parts available at your local hardware store.
Note B: Contact your nearest Powermate ® Service Center for replacement fuel tanks.

WARNING: To avoid possible personal injury or equipment damage, a registered electrician or an authorized service representative should perform installation and all service. Under no circumstances should an unqualified person attempt to wire into a utility circuit.

Remarque A: Ces pièces sont des pièces standard disponibles en quincaillerie.
Remarque B: Pour commander un réservoir de rechange, contacter Centre de service Powermate ® le plus proche.

AVERTISSEMENT: Pour éviter toute blessure personnelle ou dommage à l'équipement, l'installation et tout entretien devralent être effectués par un électricien qualifié ou un préposé au service autorisé. En aucun cas, une personne non-qualifiée ne devrait essayer de faire le raccord au circuit principal.

Nota A: Estas son piezas estándar disponibles en su ferretería local.
Nota B: Para hacer pedidos de tanques, localice el Centro de Servicio de Powermate ® más cercano.

ADVERTENCIA: Para evitar posibles lesiones físcas o daños materiales, es necesario que la instalación y todo el servicio sea realizado por un electricista matriculado o representatnte de servicio autorizado. Bajo ninguna circunstancia debe permitirse que una persona que no está capacitad trate de manipular cables dentro del circuito de servicio eléctrico.